


Section L

Ball Return

Index No.	Part No.	Description	Index No.	Part No.	Description
1.	11-001690-000	Hex Head Socket Cap Screw	34.	11-125204-001	Hex Jam Nut (3/8-16)
2.	11-190516-001	Washer	35.	11-102259-001	Headless Socket Set Screw (3/8-16 x 2")
3.	10-385515-000	Spacer	36.	11-140105-000	Square Nut (1/2-13)
4.	12-502303-000	Pulley Support Bracket	37.	11-430013-000	Ball Bearing
5.	12-502349-600	High Crown Pulley	38.	11-002001-000	Hex Head Socket Cap Screw (1/4-20 x 5/8")
6.	10-386071-000	Spacer- (1" X 3-5/16)	39.	11-191012-000	Flat Washer (5/16)
7.	11-170019-001	Self-Locking Nut (5/8-11)	40.	12-502313-000	Front Support Bracket
8.	12-502340-000	Brush Clip Shaft	41.	11-170007-001	Hex Nut Nylock (1/4-20)
9.	11-230002-001	"X" Washer (5/32)	42.	11-125009-001	Hex Nut (5/16-18)
10.	12-50318-000	Brush Clip	43.	11-195015-000	Lockwasher (5/16)
11.	12-502319-000	Brush	44.	10-675001-000	Rubber Mount
12.	12-502346-000	Bushing		90-675000-000	Black Rubber Pit Mount
13.	11-002092-001	Hex Head Socket Cap Screw (5/16-24 x 3/4")	45.	11-007182-000	Flat Head Socket Cap Screw (1/4-20 x 3/4")
14.	11-196014-001	High Collar Lockwasher (5/16)	46.	12-502305-000	Track Support
15.	10-191554-000	Flat Washer (11-32)	47.	11-190515-001	Flat Washer
16.	12-502320-000	Ball Track (Pan)	48.	11-125202-000	Hex Jam Nut (5/16-18)
17.	12-252377-000	Ball Wipe - Complete	49.	N.A.	Front Support Arm
18.	11-170011-001	Hex Nut Nylock (3/8-16)	50.	12-502304-000	Track Support
19.	10-002101-001	Hex Head Socket Cap Screw	51.	11-170011-001	Hex Nut Nylock (3/8-16)
20.	11-191018-001	Flat Washer (1/2)	52.	12-502331-000	Spring
21.	12-502458-000	Adjusting Bracket	53.	12-502343-000	Spring Retainer
22.	11-001344-001	Hex Head Cap Screw (3/8-16 x 1")	54.	12-502341-000	Channel Nut
23.	11-190522-001	Plain Washer	55.	12-502345-000	Bumper Screw
24.	11-132005-001	Heavy Hex Nut (3/8-18)	56.	11-190010-001	Flat Washer (1/4)
25.	12-502301-000	Accelerator Frame	57.	11-001348-001	Hex Head Cap Screw (3/8-16 x 1-1/2")
26.	12-862042-000	Duster Cloth (Pkg. of 3)	58.	11-190527-000	Plain Washer
27.	12-502424-000	Duster Pad	<i>N.A. = No Longer Available</i>		
28.	N.A.	L.H. Frame and Pad Assembly			
	N.A.	R.H. Frame and Pad Assembly			
29.	11-530030-001	External Retaining Ring			
30.	12-502353-000	Shaft			
31.	11-002129-001	Hex Head Cap Screw (3/8-16 x 2-1/4")			
32.	11-002128-001	Hex Head Socket Cap Screw (3/8-16 x 2")			
33.	11-002132-001	Hex Head Socket Cap Screw (3/8-16 x 3")			


Ball Accelerator

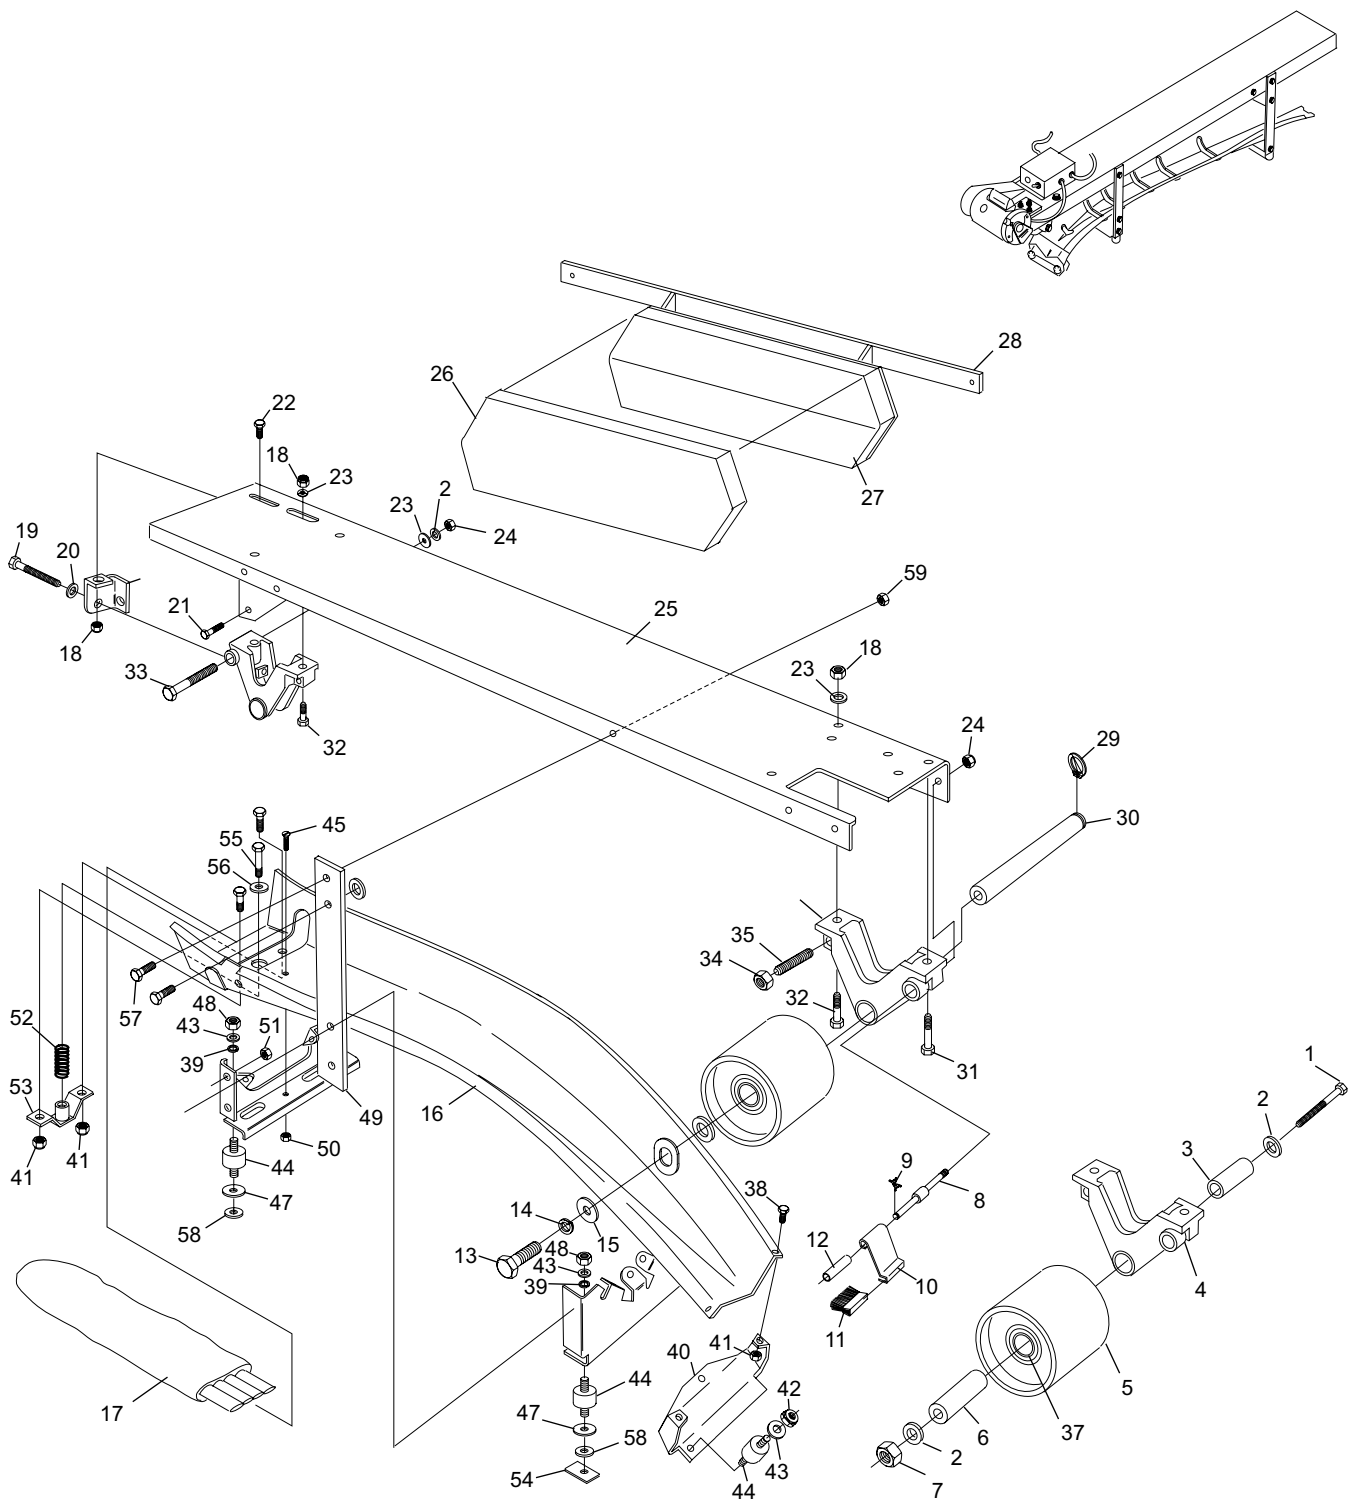

Ball Accelerator

Index	Part Number	Description
1.	11-002129-001	Hex Head Cap Screw (3/8-16 x 2-1/4")
2.	11-078034-001	Round Head Socket Cap Screw (3/8-16 x 1")
3.	12-502338-000	Belt Shield
4.	11-195014-001	Lockwasher (1/4)
5.	11-081007-001	Hex Washer Self Tapping Screw (1/4 x 3/8")
6.	12-502301-000	Accelerator Frame
7.	12-502337-000	Cable Assembly
8.	11-611011-000	Large Strain Relief Bushing
9.	12-502336-010	Control Box
	12-502335-000	Control Box Assembly
10.	11-017564-001	Round Head Slotted Cap Screw
11.	10-750619-001	3-Conductor Service Cord
12.	11-615502-000	Toggle Switch
13.	12-750033-000	Box Mounting Receptacle
14.	12-862830-000	Relay
15.	11-678601-000	Flush Base Connector
16.	11-107024-001	Screw
17.	11-679201-000	Connector Body
18.	11-170011-001	Hex Nut Nylock (3/8-16)
19.	12-502XXX-000	Motor Pulley (see chart on previous page)
20.	11-170009-001	Hex Nut Nylock (5/16-18)
21.	12-502308-000	Motor Plate
22.	11-190523-000	Plain Washer
23.	11-191012-001	Flat Washer (5/16)
24.	11-001263-001	Hex Head Cap Screw (5/16-18 X 7/8")
25.	12-502424-000	Duster Pad
26.	N.A.	Filter
27.	12-802059-003	Motor (1/4 hp 1425-1725 RPM)
	12-802059-004	Accelerator Motor(1/2 hp 2850-3450 RPM)
28.	10-705043-002	Cooling Fan
	10-705043-003	Fan Cover

N.A. = No Longer Available

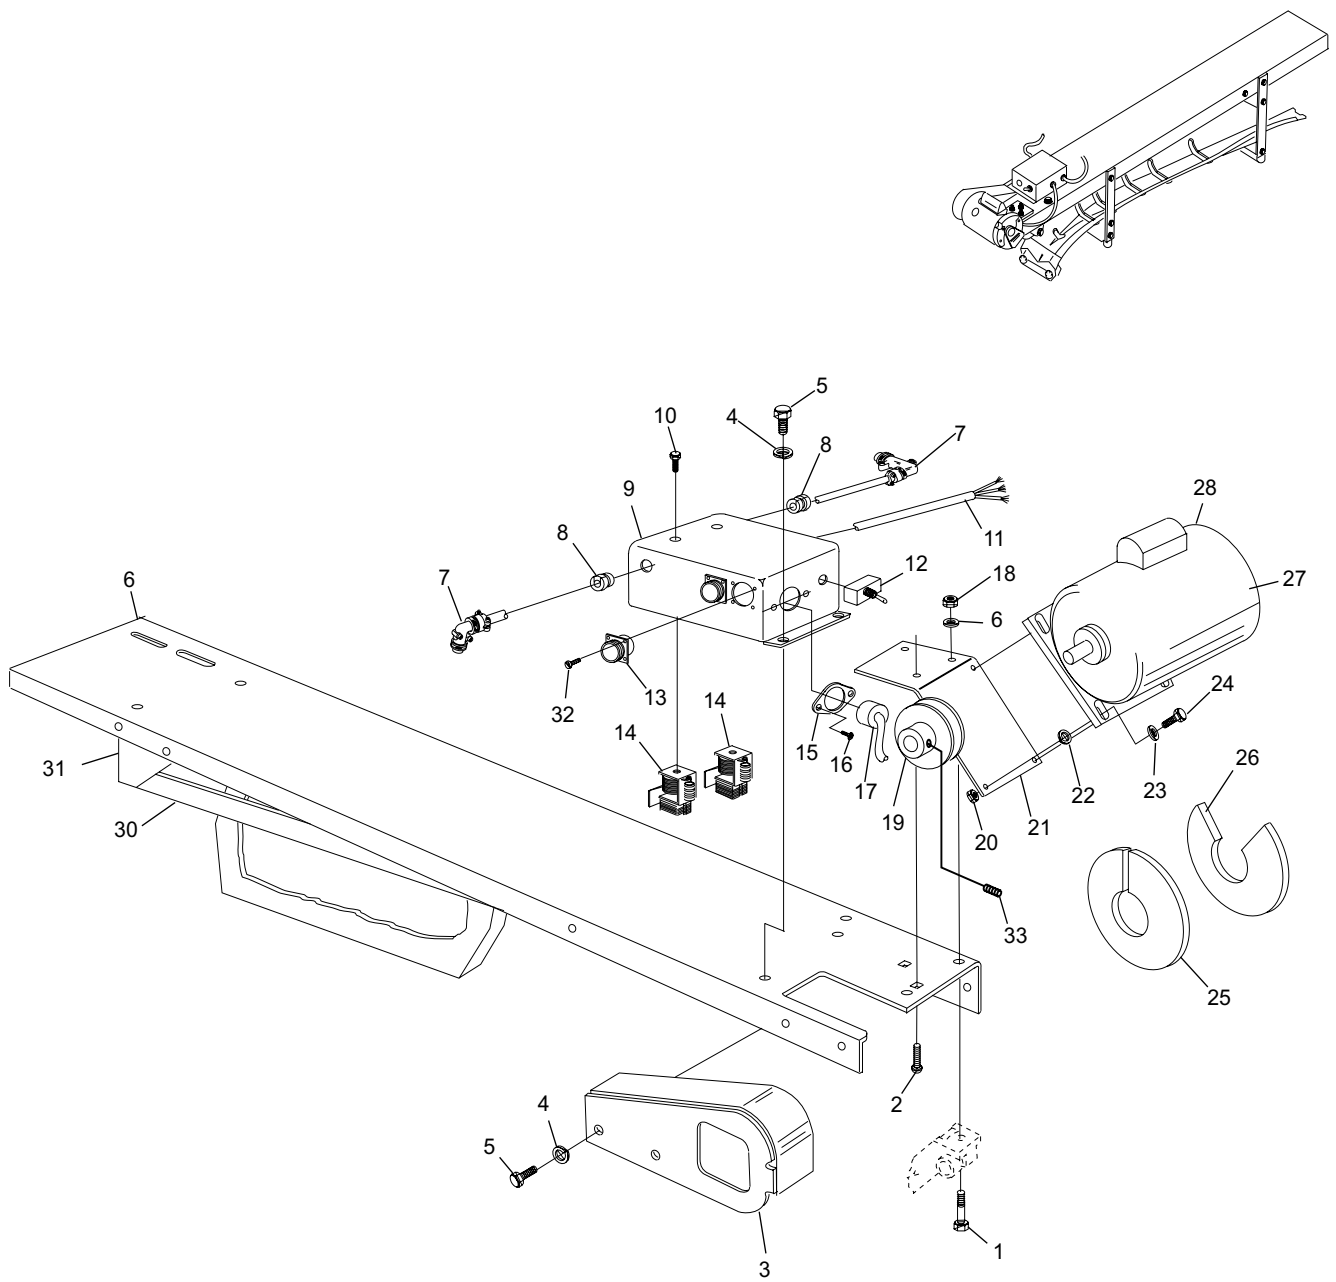


Ball Accelerator

Index	No.	Part No.	Description
1.		61-860028-000	E-Z Ball Duster Apron
2		12-502442-000	Ball Duster Frame
		29-088557-000	Wiper Frame Assembly, See Note
		29-088559-000	Assembly
		29-203256-000	Frame Holder
		N.A.	Frame Holder
3.		12-802059-003	Motor (1/4 hp 1425-1725 RPM)
4.		11-191012-001	Flat Washer (5/16)
5.		11-001262-001	Hex Head Cap Screw (5/16-18 x 3/4")
6.		11-413051-000	Adapter Bearing Flange
7.		11-413001-000	Ball Bearing
8.		12-502613-000	Hub
9.		11-101208-001	Set Screw (5/16-18 x 3/4")
10.		53-530060-000	Rubber Hub and Tire Assembly
		90-520060-000	Urethane Ball Wheel Assembly
11.		11-195015-001	Lockwasher (5/16)
12.		12-502611-000	Drive Shaft
13.		11-050006-000	Woodruff Key
14.		12-100187-009	Square Key
15.		11-170009-001	Hex Nut Nylock (5/16-18)
16.		12-502602-000	Booster Frame
17.		10-750619-000	Cable Assembly - 3 COND., 18 AWG, 2' 2"
18.		11-611011-000	Large Strain Relief Bushing
19.		11-615502-000	Toggle Switch
20.		11-195014-001	Lockwasher (1/4)
21.		11-081007-001	Hex Washer Self Tapping Screw (1/4 x 3/8")
22.		12-750033-000	Box Mounting Receptacle
23.		11-017564-001	Round Head Slotted Cap Screw
24		12-502335-000	Control Box Assembly
		12-502336-010	Control Box
25.		11-611009-000	Small Strain Relief Bushing
26.		12-862830-000	Relay
27.		10-621055-000	Key - 3/16 SQ. X 1 1/8 LG.
28.		10-510701-000	Sheave (8")
		10-510704-000	Sheave (9")
29.		10-510702-000	Sheave (2.3")
		10-510703-000	Sheave (2.7")
30.		11-170011-001	Hex Nut Nylock (3/8-16)
31.		11-191014-001	Flat Washer (3/8)
32.		11-190014-001	Flat Washer (3/8)
33.		11-190522-001	Plain Washer
34.		11-001348-001	Hex Head Cap Screw (3/8-16 x 1-1/2")
35		11-007348-000	Flat Head Socket Cap Screw (3/8-16 x 1-1/2")
36.		11-001345-000	Hex Head Cap Screw (3/8-16 x 1-1/8)
37.		12-352566-000	Bracket
38.		11-001263-001	Hex Head Cap Screw (5/16-18 x 7/8")

N.A. = No Longer Available

Note: Order Part 29-088557-000

Ball Booster

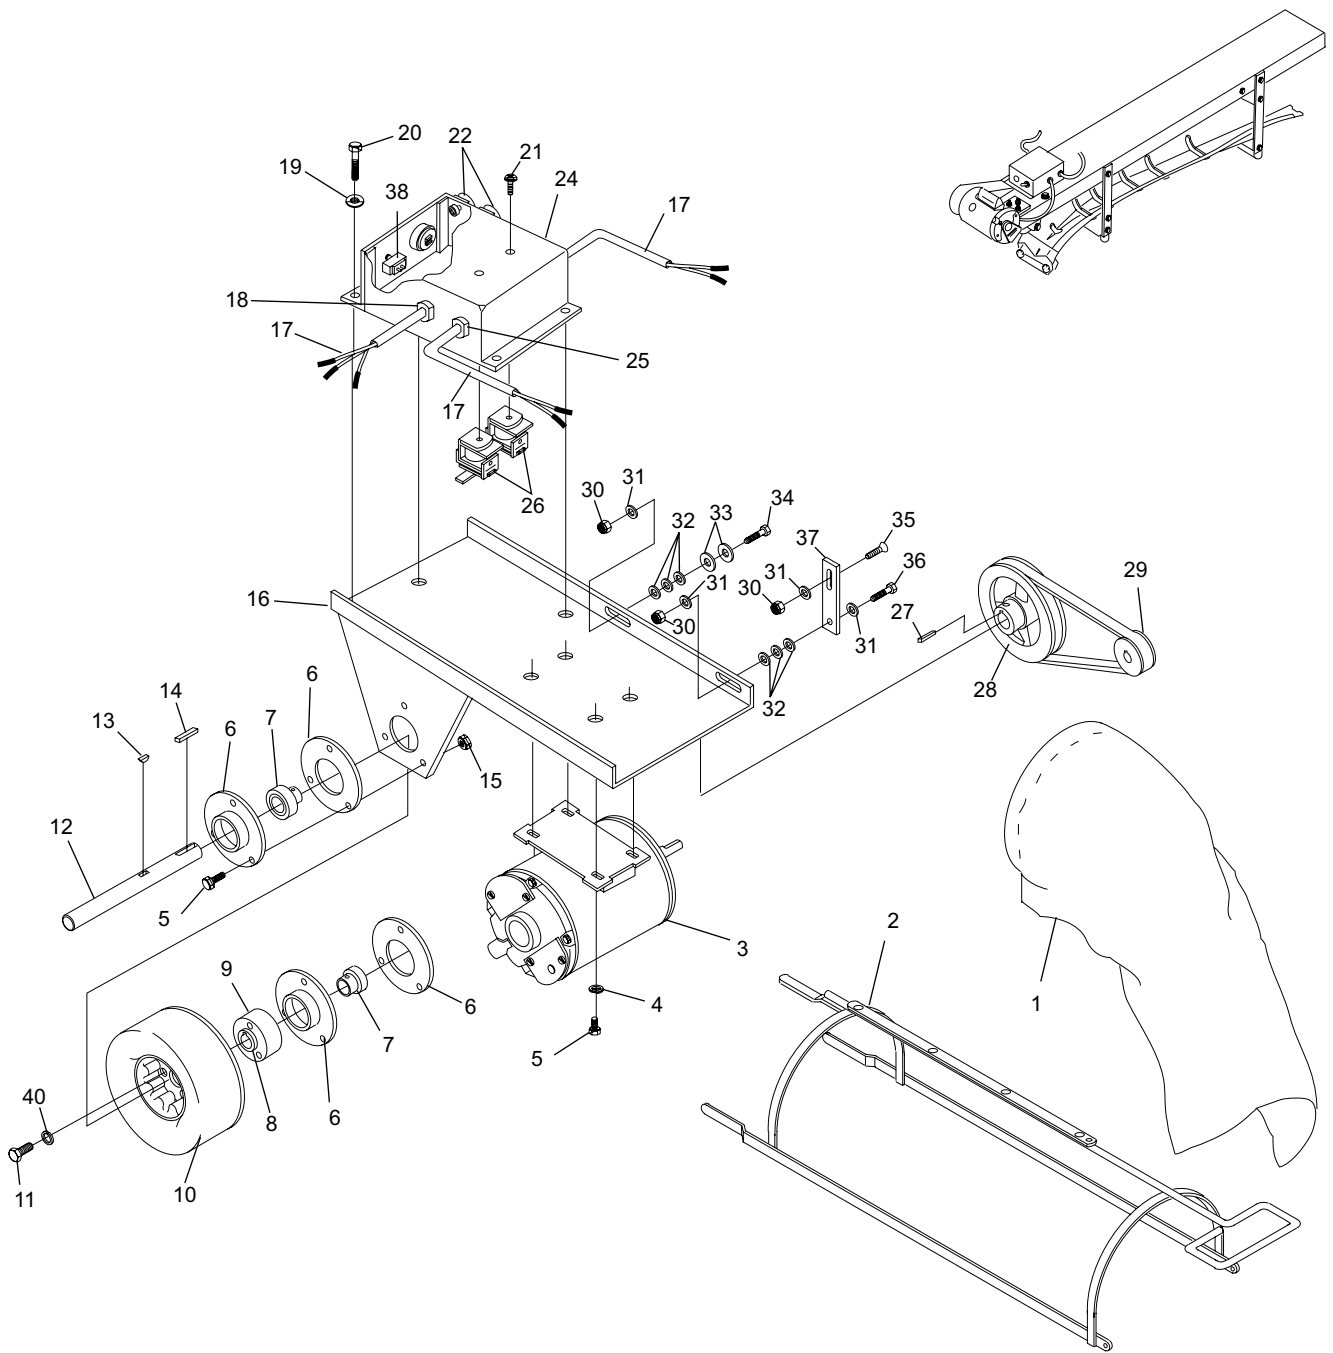


Ball Booster

Index

No.	Part Number	Description
1.	10-421901-000	Flanged Oilite Bearing
2.	12-502134-000	Y-Switch Shaft
3.	11-354002-001	Groove Pin
4.	12-502100-000	Switch Track Assembly
5.	12-502157-002	Shim
	12-502157-003	Shim
	12-502157-004	Shim
6.	12-502131-000	Y Switch Stop Bar
7.	11-170009-001	Hex Nut Nylock (5/16-18)
8.	11-001264-001	Hex Head Cap Screw (5/16-18 x 1")
9.	12-502155-000	Y-Switch Spacer
10.	12-502328-000	Plate Assembly
11.	12-502154-000	Y-Switch Bumper (Pull-Thru)
12.	90-502153-000	Nylon Y-Switch
	12-502159-000	Y-Switch Assembly
13.	11-190514-001	Flat Washer
14.	11-195016-001	Lockwasher (3/8)
15.	11-001348-001	Hex Head Cap Screw (3/8-16 x 1-1/2")
	11-001350-001	Hex Head Socket Cap Screw (3/8-16 x 1-3/4")
16.	11-190014-001	Flat Washer (3/8)
17.	11-170011-001	Hex Nut Nylock (3/8-16)
18.	11-190018-001	Flat washer (1/2)
19.	12-502156-000	Plate
20.	11-170007-001	Hex Nut Nylock (1/4-20)
21.	12-502166-000	Stop Bracket
22.	11-001183-000	Hex Head Socket Cap Screw (1/4-20 x 7/8")
23.	11-230003-001	"X" Washer (3/16)
24.	12-502192-000	"Y" Switch
25.	11-001950-001	Hex Head Socket Cap Screw (3/8-16 x 1-1/2")
26.	12-502194-000	Spring Washer
27.	12-502199-000	Clutch Plate Assembly
28.	12-502195-000	Thrust Bearing
29.	10-190019-000	Nylatron Washer
30.	11-483017-000	Needle Roller Bearing (11/16 I.D. X 7/8 O.D.)
31.	10-386239-000	Spacer
32.	12-502196-000	Pivot Shaft
33.	11-345264-001	Roll Pin (5/32 x 1-1/4")
34.	11-345263-001	Roll Pin (5/32 x 1-1/8")
35.	11-530024-000	External Retaining Ring (.640 I.D.)
36.	N.A.	Headed Spirol Pin
37.	12-502187-000	Torsion Spring
38.	12-150130-005	Spring Wheel
39.	11-001267-000	Hex Head Socket Cap Screw (5/16-18 x 1-3/8")
40.	12-502183-000	Rear Stop
41.	12-350167-000	Nut Retainer
42.	11-170009-001	Hex Nut Nylock (5/16-18)

N.A. = No Longer Available


Center Ball Return "Y" Switch

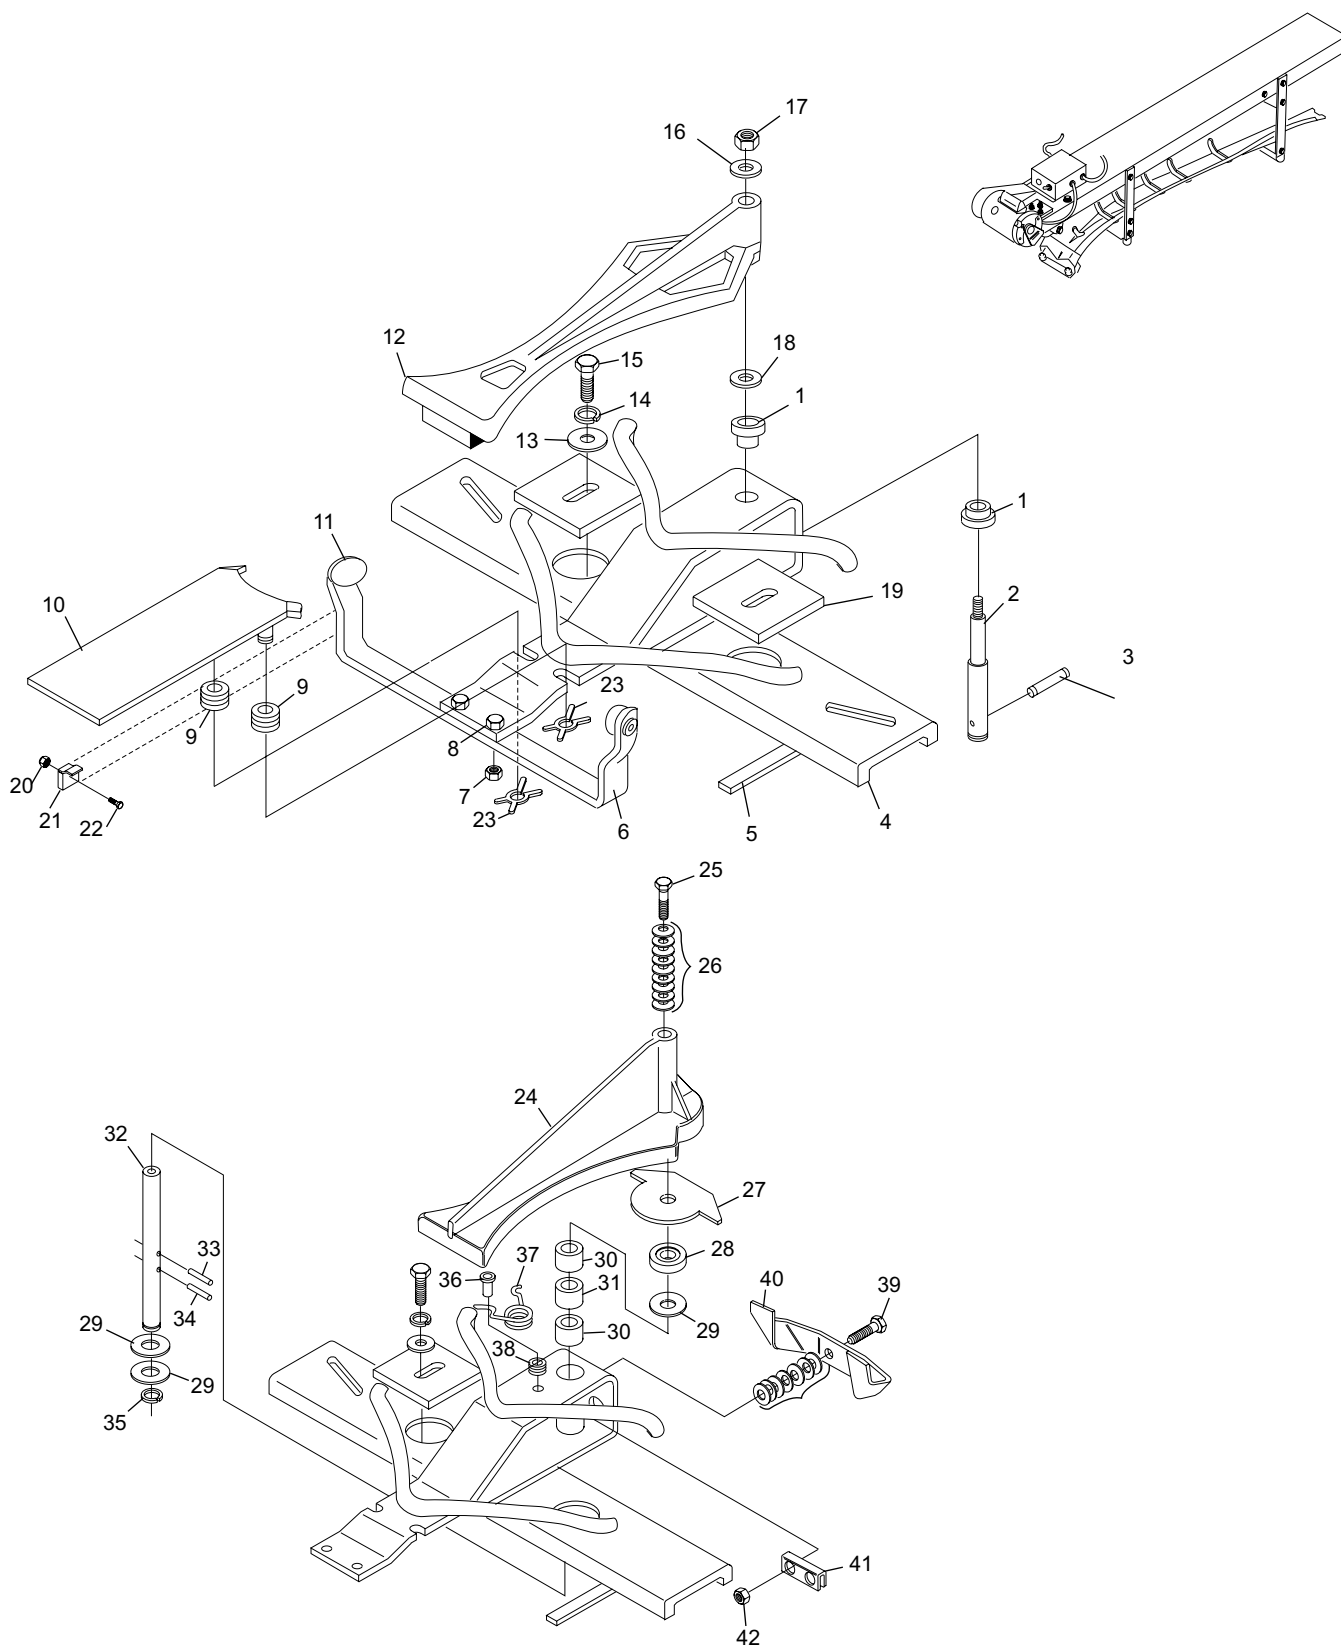

Center Ball Return "Y" Switch

Index No.	Part Number	Description	Index No.	Part Number	Description
1.	12-502105-000	Ball Track Assembly (Curved)	41.	11-107068-000	Machine Screw - R. Hd. (8-32 x 3/4")
2.	11-001355-001	Hex Head Cap Screw	42.	11-430037-000	Ball Bearing
3.	11-190522-001	Plain Washer	43.	11-345520-000	Roll Pin (3/8 x 2")
4.	11-170011-001	Hex Nut Nylock (3/8-16)	44.	12-502114-000	Tension Spring
5.	12-502140-000	R.H. Track Brace	45.	12-502152-000	Bracket
6.	11-125104-001	Hex Nut (3/8-16)	46.	10-386091-000	Spacer
7.	12-502100-000	Switch Track Assembly	47.	11-191014-001	Flat Washer (3/8)
8.	12-502132-000	Rod	48.	11-001342-001	Hex Head Cap Screw (3/8-16 x 3/4")
9.	12-502131-000	Y Switch Stop Bar	49.	11-001344-001	Hex Head Cap Screw (3/8-16 x 1")
10.	11-125253-001	Hex Jam Nut (5/16-24)	50.	11-170004-000	Locknut
11.	11-599001-000	Turnbuckle (5/16-24 RH/LH X 5-1/4)	51.	11-001355-000	Hex Head Cap Screw (3/8-16 x 2-3/4")
12.	12-502143-000	Rod	52.	11-190522-000	Washer (13/32)
13.	10-690001-000	Ball Joint Assembly	53.	10-386078-000	Spacer (1/4 x 7/8")
14.	11-001186-000	Hex Head Cap Screw (1/4-20 x 1-1/4")	54.	11-191014-000	Washer (3/8)
15.	11-001272-001	Hex Head Cap Screw (5/16-18 x 2")	55.	11-008189-000	Cap Screw - F. Hd. Soc.
16.	12-502133-000	Ball Trip	56.	12-402436-000	Ball Track Mounting Plate
17.	11-421110-000	Flanged Oilite Bearing	57.	12-252091-000	Bearing
18.	10-386077-000	Spacer (5/16 x 1-9/32)	58.	N.A.	Support Order (12-862180-000)
19.	11-190012-001	Flat Washer - SAE (5/16)	59.	12-252090-000	Bumper
20.	11-170009-001	Hex Nut Nylock (5/16-18)	60.	12-402425-000	Support Brace
21.	12-502142-000	Trip Rod	61.	11-387264-002	Rolled Spacer (5/16 x 1")
22.	12-502115-000	Ball Track Assembly	62.	12-862180-000	Support Arm Assembly
23.	12-502139-000	L.H. Track Brace	63.	11-125102-000	Hex Nut (5/16-18)
24.	12-502162-000	Fence Assembly	64.	11-195015-001	Lockwasher (5/16)
25.	34-082132-000	Rubber Roller Assembly	65.	12-502137-000	Spring Post
26.	12-503138-000	Ball Stop Bracket	66.	10-386080-000	Spacer
27.	12-502136-000	Hook	67.	10-386082-000	Spacer (13/32 x 5/16)
28.	12-502167-000	Tension Spring	68.	11-001190-001	Hex Head Cap Screw (1/4-20 x 1-3/4")
29.	10-376001-000	Spring Wheel	69.	12-502138-000	Ball Stop Bracket
30.	12-502145-000	Washer	70.	10-435501-000	Hex Shoulder Screw - 25/64 X 7/8
31.	11-001276-001	Hex Head Cap Screw (5/16-18 x 3")	71.	11-001350-000	Hex Head Cap Screw (3/8-16 x 1-3/4")
32.	11-001185-001	Hex Head Cap Screw (1/4-20 x 1-1/8")	72.	11-195006-000	Lockwasher (#6)
33.	11-345408-001	Roll Pin (1/4 x 3/4")	73.	11-013020-000	Pan Head Slotted Machine Screw (6-32 x 1/4")
34.	11-190010-000	Flat Washer (1/4)	74.	53-100248-000	Clip
35.	12-502153-000	Stop	75.	53-100247-000	Mercury Switch Assembly
36.	11-170007-000	Locknut (1/4-20)	76.	11-421111-000	Flanged Oilite Bearing
37.	12-502151-000	Block	77.	12-150158-017	X-Washer Pin
38.	12-502150-000	Pivot Bracket	78.	10-386076-000	Spacer (3/8 x 1-1/32")
39.	11-170009-000	Lock Nut	79.	11-230001-000	"X" Washer (1/8)
40.	10-390001-000	Ball Joint Assembly	<i>N.A. = No Longer Available</i>		

Center Ball Return

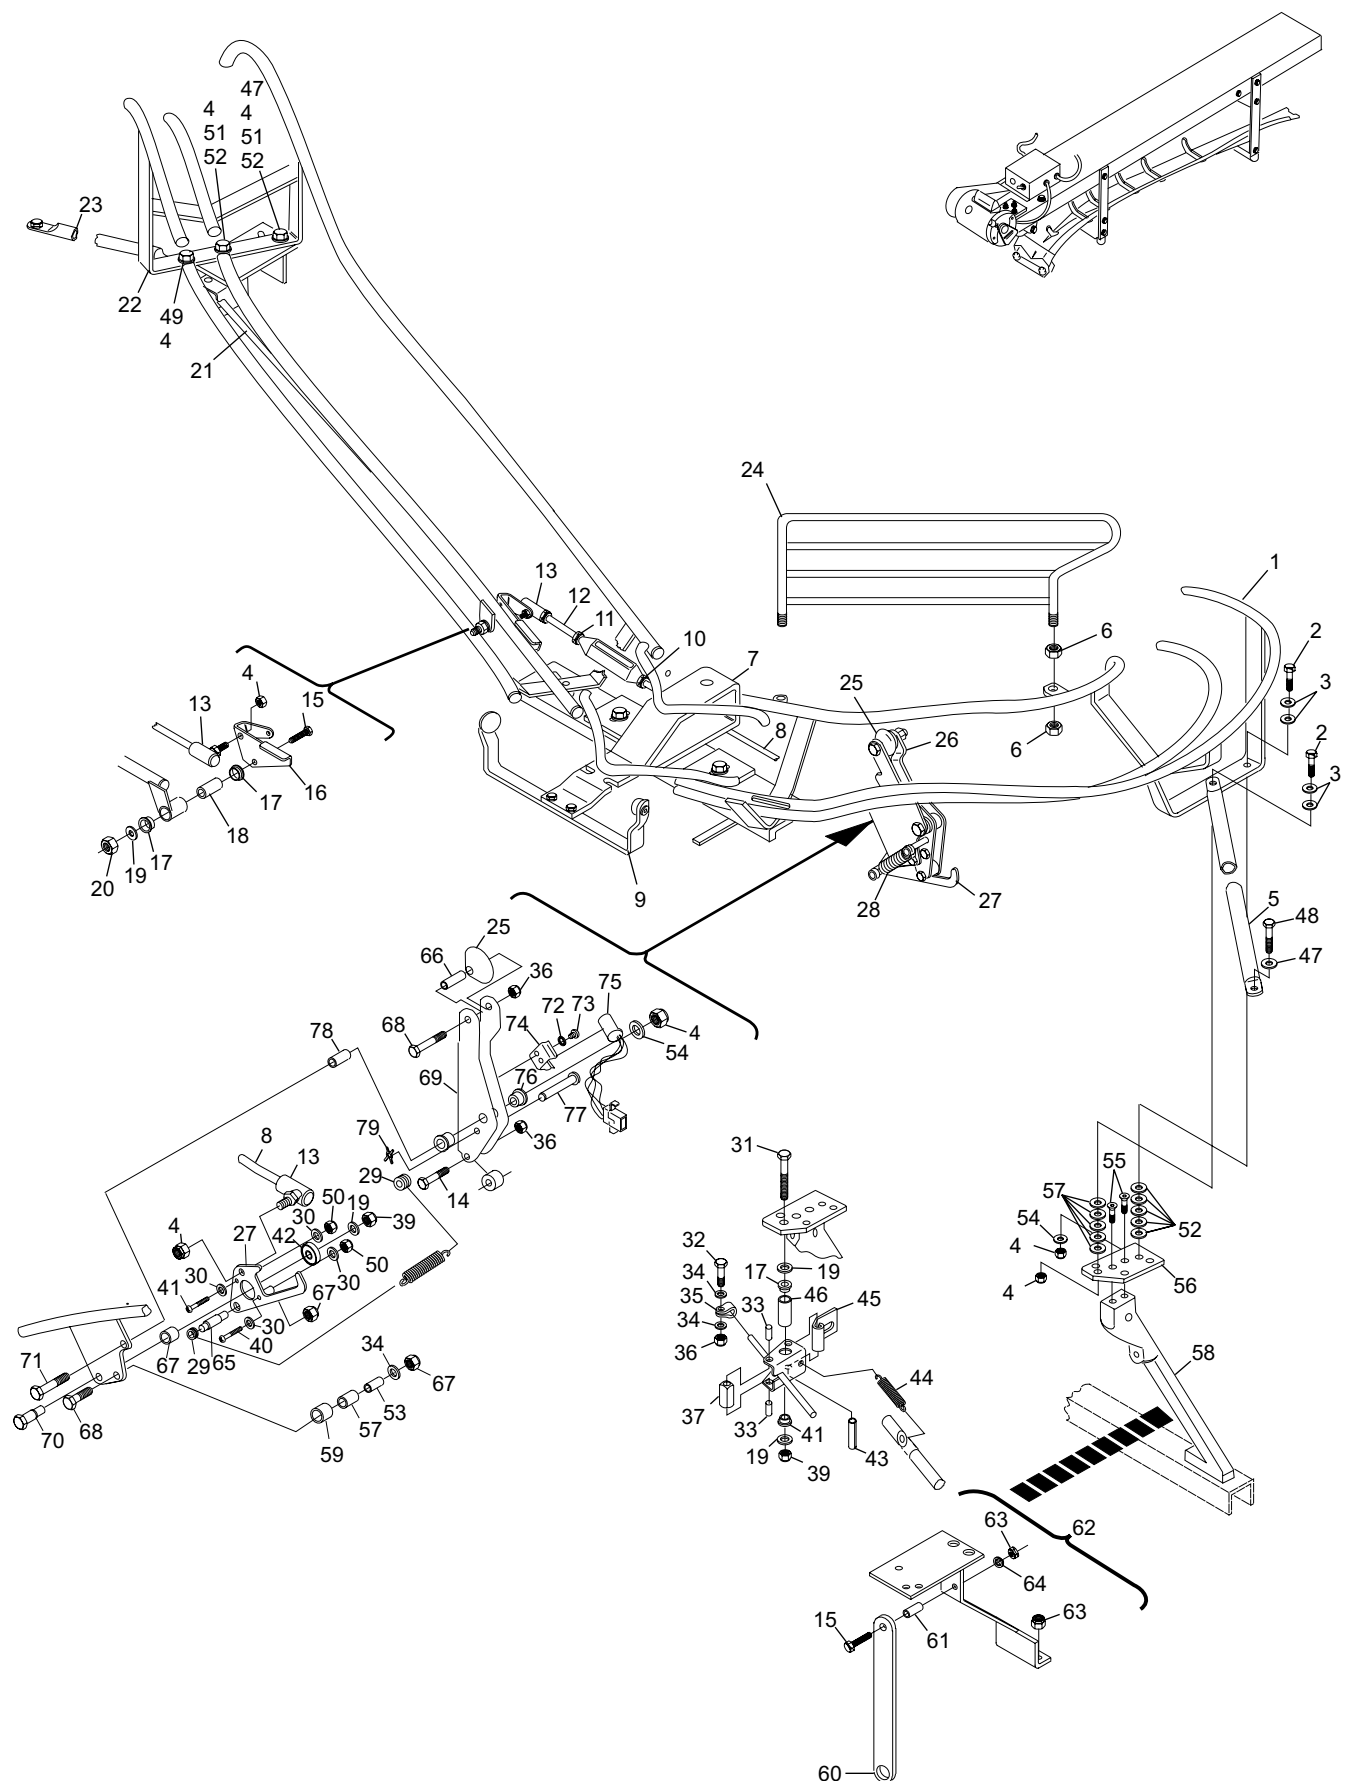

Center Ball Return